

SCAN THE QR CODE
BELOW FOR
MORE INFORMATION



WARNING



DO NOT use an automatic car wash.



Return the Bolt with at least 70% charge.



Return the Bolt to your pickup location.



©2023 Avis Budget Group, Inc.

CHEVY BOLT EV GUIDE




AVIS[®]
PLAN ON US[™]

Budget[®]


1 UNLOCK/LOCK DOOR

To lock/unlock the vehicle, press the corresponding button on the key fob.

NOTE: The key fob must be within 3ft (1m) to operate.

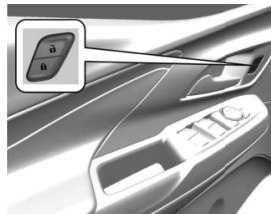


4 PUT THE VEHICLE IN DRIVE

The shift switches are on the center console. The selected gear position will illuminate red on the shift switch, while all others will be displayed in white.




5 MONITOR THE BATTERY INDICATOR

The battery indicator monitors the charge level & an estimated distance remaining on the battery. Climate & driving behavior will impact remaining miles.

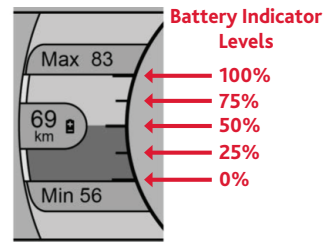

6 REGENERATIVE BRAKING

Regenerative braking uses energy from the moving vehicle to charge the battery. When enabled, it will illuminate green & when foot is off the accelerator pedal, the vehicle will aggressively decelerate.

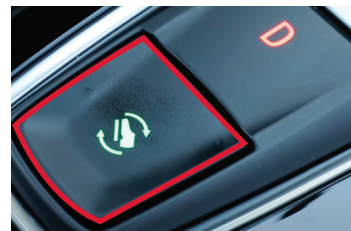

7 CHARGING PORT

Push the right edge of the charge port cover to open. In cold weather conditions, ice may form around the charge port door.



8 CHARGING LOCATIONS

Locating Charging Station: Download the ChargeHub or Plugshare apps.

ChargeHub: Download to start using. Click the filter icon & select only Level 2 and DC Fast (Level 3) & "CCS" & "J1772" connectors.

Plugshare: Download & sign-up to start using. Click the filter icon & select only "CCS/SAE" and "J1772".

NOTE: The easiest method of payment is with a credit card at the charging terminal.

9 LEVEL 2 CHARGING


NOTE: Level 2 charging can take hours!

Open Charge Port: Put the car in Park & open the charge port door & release to open.

Plugging In: Plug in the AC Charge cord. Verify the charging status indicator illuminates on top of the dash.

Lock/Arm Charge Cord: To arm the charge cord theft alert, lock the vehicle twice with the remote key.

End Charging: Unlock the vehicle. Press & hold the button on the connector handle to release the lock. Close the charge port door by pressing firmly until it latches.

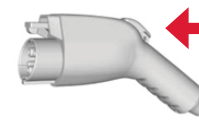

Connector Handle



Level 2 (J1772)

10 LEVEL 3 FAST CHARGING

NOTE: Level 3 charging is typically under an hour.

Open Charge Port: Put the vehicle in Park & press the electric parking brake. Open the charge port & open the DC charging cover.

Plugging In: When charging is active, the DC vehicle plug is locked to the DC charge cord & it cannot be disconnected. Verify the charging status indicator.

End Charging: DC fast charging will stop & unlock automatically when vehicle is fully charged. To stop charging when inside the vehicle, use the stop charge button on the charging screen.




Level 3 (CCS)

2 START THE VEHICLE

Press the push start button with the key fob inside the vehicle.


NOTE: If the vehicle will not start, place the key fob in the transmitter pocket inside the center console.

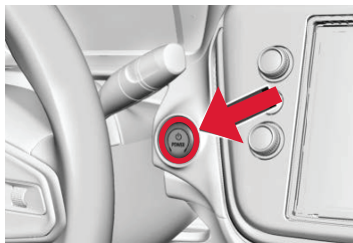

3 REVIEW CONTROLS BEFORE DRIVING



Light settings are on the left of the steering wheel. They are automatically set based on outside lighting.

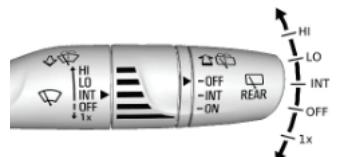

The windshield wiper/washer lever is on the side of the steering column.



Alter the steering wheel by pulling the lever down & adjusting.



Adjust the mirrors by selecting driver/passenger first.